


QUICK START GUIDE

LC 617




Read carefully before use


LC 617 Mounting

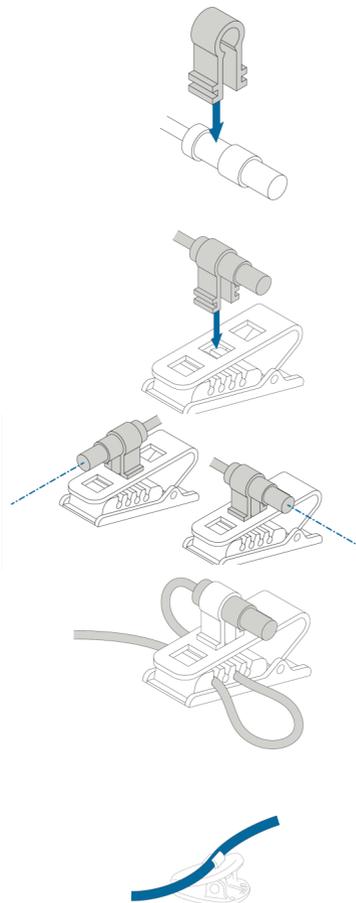

LC 617 Positioning

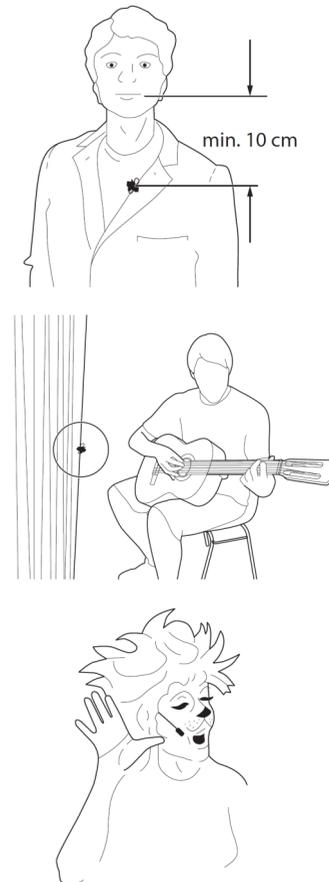

Adapter Mounting

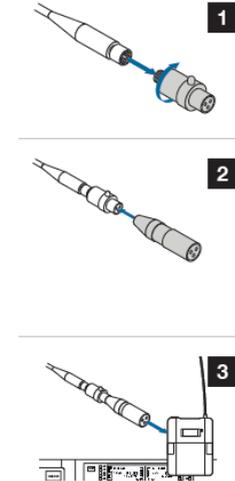

Cleaning

- To clean the microphone surface, use a soft cloth moistened with water.
- Clean the foam windscreen in mild soap suds. You can use the windscreen again as soon as it has dried.

Download cutsheet with technical details

from: www.akg.com

For CE certificates contact: hotline@akg.com

This product conforms to the standards listed in the Declaration of Conformity.



Printed in EU

01/17/5079105_B

Trouble Shooting

Problem	Possible Reason	How to Solve
No Sound:	<ol style="list-style-type: none"> 1. Power to mixer and/or amplifier is off. 2. Channel or master fader on mixer, or volume control on amplifier is at zero. 3. Microphone is not connected to mixer or amplifier. 4. Cable connectors are seated loosely. 5. Cable is defective. 6. No supply voltage. 	<ol style="list-style-type: none"> 1. Switch power to mixer or amplifier on. 2. Set channel or master fader on mixer or volume control on amplifier to desired level. 3. Connect microphone to mixer or amplifier. 4. Check cable connectors for secure seat. 5. Check cable and replace if damaged. 6. Switch phantom power on 6a. Check cable and replace if necessary.
Distortion:	<ol style="list-style-type: none"> 1. Gain control on the mixer set too high. 2. Mixer input in overload 	<ol style="list-style-type: none"> 1. Turn gain control down CCW. 2. Connect a 10-dB preattenuation pad between microphone and mixer
Also read the transmitter and receiver manuals!		



Europe:

AKG Acoustics GmbH
Laxenburger Strasse 254
A1230 Vienna - AUSTRIA
Tel.: +43-1-86654-0
hotline@akg.com

USA:

AKG Acoustics, U.S.
8500 Balboa Blvd. Dock 15
Northridge, CA 91329, USA
Tel.: +1-818-920-3224
akgusatechsupport@harman.com

RISK OF DAMAGE

Please make sure that the piece of equipment your microphone will be connected to fulfills the safety regulations in force in your country.

ENVIRONMENT



1. When scrapping the equipment, separate the case, circuit boards and cables and dispose all components in accordance with local waste disposal rules.
2. The packaging of the equipment is recyclable. Dispose packaging in an appropriate container provided by the local waste collection/ recycling entity and observe all local legislation relating to waste disposal environment and recycling.